






Accessory installation

Sweepy Free

Synchronise the remote control with the control box

If equipment is replaced, it is essential to synchronise the remote with the control box.



- Plug the control box to the power supply. It is not necessary for the robot to be connected to the control box.
- Press the button  on the remote control and keep it pressed down for the continuation of the peering procedure.
- Press the button  then the Cycle I button whilst at the same time pressing .
- After approximately 6 seconds, the 4 indicators on the box will light up.
- Release the button; the remote control unit is now ready.
- If the light indicators switch off when the 3 buttons are held down, restart the synchronisation procedure.